


EAZY SHELF NICHE INSTALLATION GUIDE

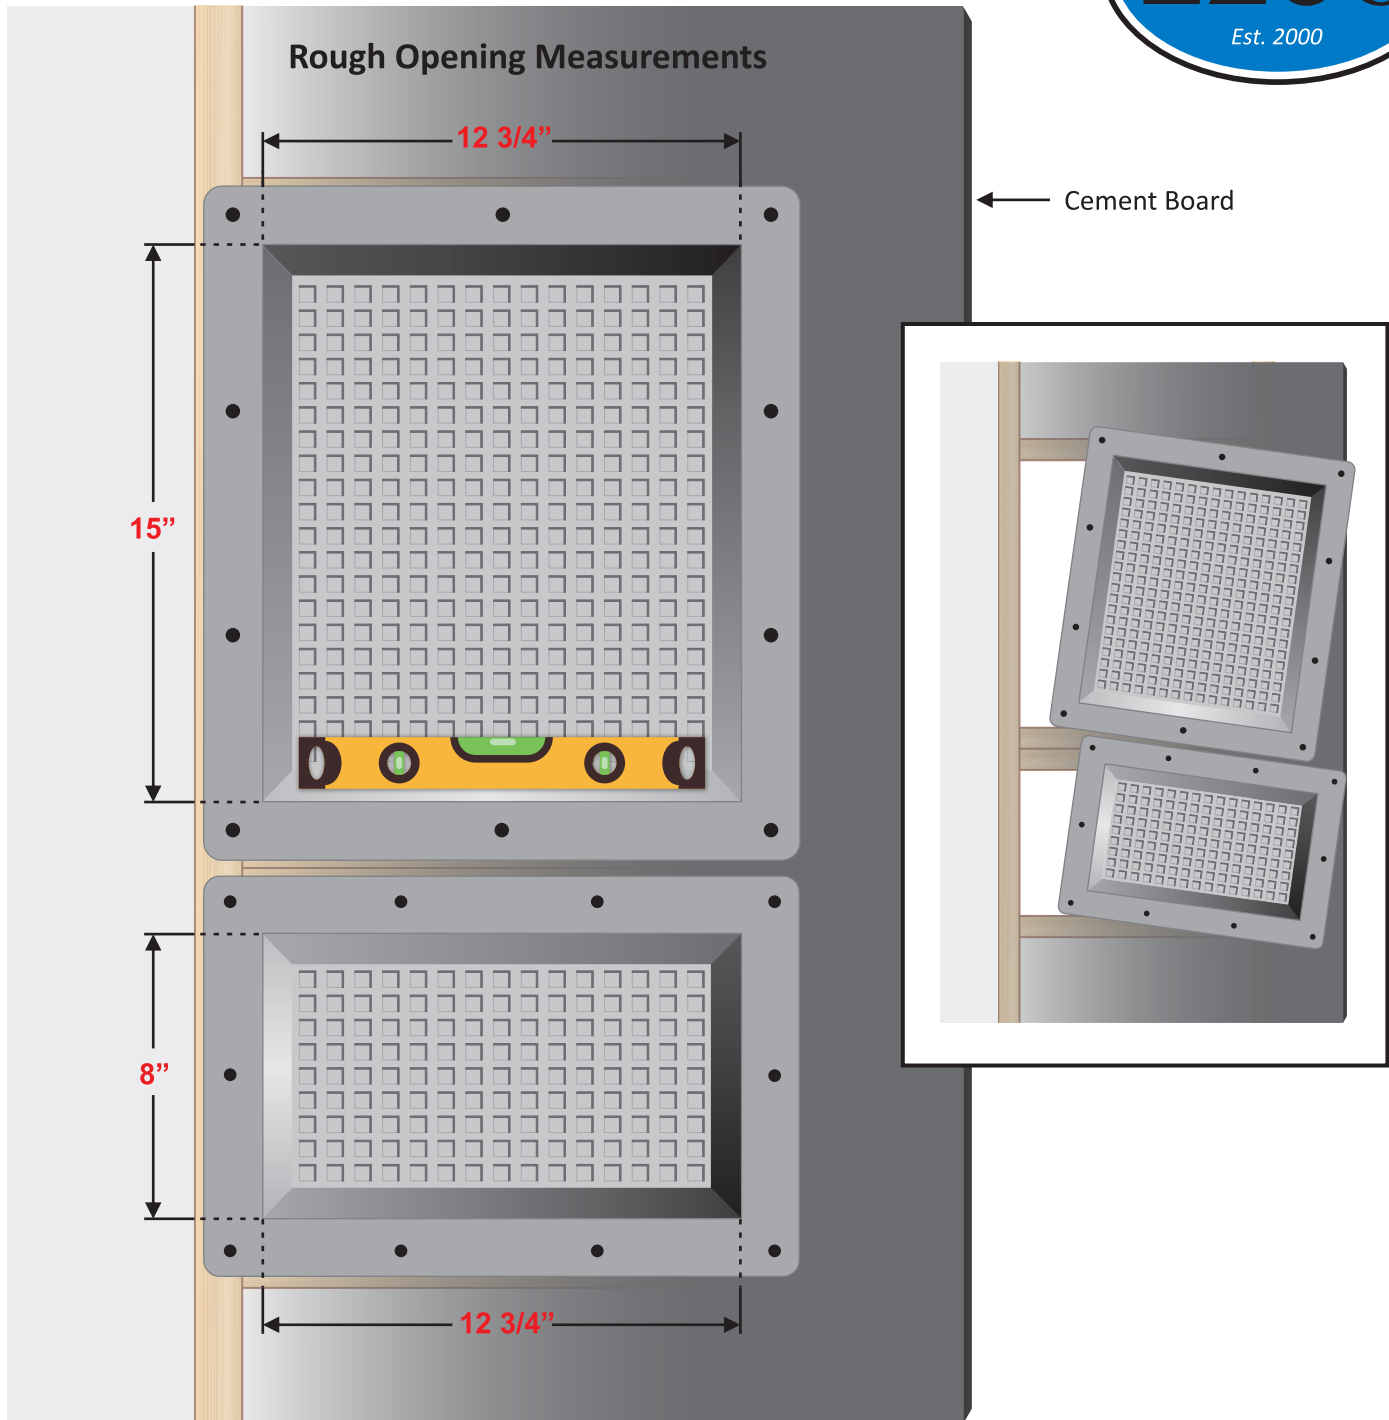

INSTRUCTIONS

- Install blocking as needed
- Cut opening in substrate;
 - For 7" x 12" shelf - Cut 8" x 12 3/4" opening in substrate
 - For 14" x 12" shelf - Cut 15" x 12 3/4" opening in substrate
- Apply a continuous bead of waterproof caulk to back of flange
- Place in opening and level
- Secure with fasteners